

# Metallic Wood




## Tim Glastetter | Limited Edition | Spring 2020

### PRODUCTS

- Golden Paintworks Metallic Paint Tint Base Gold
- Golden Paintworks Glazing Medium
- Golden Paintworks Clear Topcoat Satin
- Golden Paintworks Slow Dry Fluid Acrylics  
Ultramarine Blue, Carbon Black and Van Dyke  
Brown Hue
- Sherwin Williams Naval (6244) in Satin

### TOOLS

- HVLP Sprayer
- Substitute HVLP Sprayer  
for a Foam Roller and  
Quality Paintbrush
- Cheesecloth
- Spalter Brush (2)

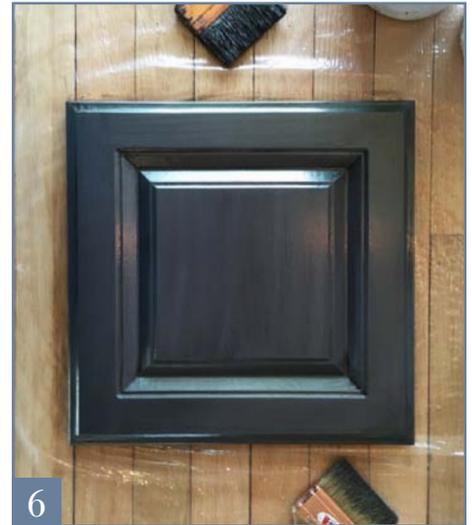

**HOW TO:**

- 1 | **BASE** coat in a similar color as the metallic you are using. I used SW 6244 Naval, in satin. Tint the Metallic Paint Tint Base Gold with Slow Dry Fluid Acrylic Ultramarine Blue to taste. Using a spray gun, apply 2 -3 light coats. Let dry overnight (*Photo 1*).
- 2 | **MIX** 1 ¼ cup Glazing Medium with 2 tsp. Slow Dry Fluid Acrylic Van Dyke Brown Hue and 1/2 tsp. Slow Dry Fluid Acrylic Carbon Black (*Photo 2*).
- 3 | **USING** a spalter brush, apply glaze 100%, making sure to get glazing in all corners and crannies. Remove excess with dry cheese cloth (*Photos 3 - 5*). Next use a second (clean and dry) water spalter to drag and soften. Use clean cheese cloth to finish (*Photo 6*). Let dry completely.
- 4 | **USING** the Clear Topcoat Satin thinned with water, spray clear coat using HVLP or brush and roller. Let dry (*Photo 7*).