

RECLAIMED HERRINGBONE



GPW GOLDEN
PAINTWORKS.

Artkeyologie | Limited Edition Collection | Fall / Winter 2021

PRODUCTS

- Golden Paintworks Soapstone
- Golden Paintworks Pre-mixed Metallic Paint Just Brass
- Golden Paintworks Slow Dry Fluid Acrylic in Titanium White, Carbon Black, Raw Sienna and Burnt Umber
- Golden Paintworks Glazing Gel

TOOLS

- Golden Paintworks Small Plaster Trowel 200x80
- 2" Sash Paintbrush
- 4" Chip Brush
- Blue Painters Tape



1



2




3



4



5

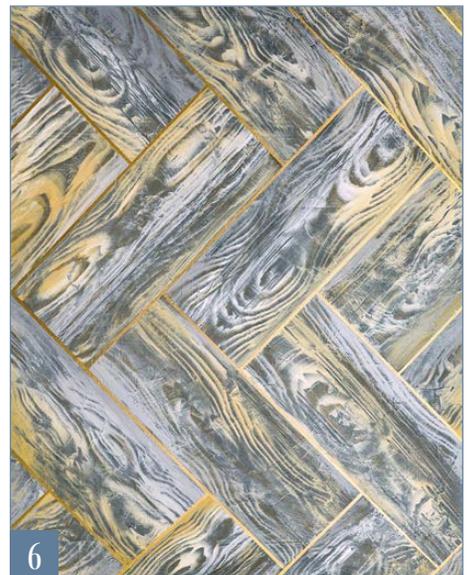

6

- 1 | **APPLY** Soapstone with a GPW Trowel and let dry.
- 2 | **TO CREATE** medium gray, mix one part Slow Dry Fluid Acrylic Carbon Black with 4 parts Slow Dry Fluid Acrylic Titanium White (*Photo 1*). Paint entire surface medium Gray and let dry.
- 3 | **LAY OUT** herringbone pattern with ruler and pencil (*Photo 2*).
- 4 | **CREATE** your color palette. Mix four parts Slow Dry Fluid Acrylic Titanium White with one part Slow Dry Fluid Acrylic Carbon Black for gray shade. Mix two parts Slow Dry Fluid Acrylic Titanium White with one part Slow Dry Fluid Acrylic Raw Sienna for caramel shade. Mix one part Slow Dry Fluid Acrylic Titanium White with four parts Slow Dry Fluid Acrylic Raw Sienna for cream color. Add one part glaze to each color (*Photo 3*).
- 5 | **TAPE** every other wood plank. Take a chip brush and apply paint colors in a linear direction, allowing for dry brush look. Drag your graining tool with a slow rolling motion to create a wood grain effect. Let dry, pull tape and continue until all planks are completed (*Photo 4*).
- 6 | **TAPE** for grout lines. Burnish your tape and paint area with Metallic Paint Just Brass (*Photo 5*). Let dry and pull tape to reveal your Golden Paintworks masterpiece (*Photo 6*).