

# After the Rain



**GPW** GOLDEN  
PAINTWORKS.




## Art Deco Unique | Limited Edition | Spring 2020

### PRODUCTS

- Golden Paintworks Metallic Texture Tint Base Pearl
- Golden Paintworks Soapstone
- Golden Paintworks Pre-Mixed Metallic Paint in the colors: Splendor, Future, Soft Gold and Moody
- High Quality Water-based Primer

### TOOLS

- Golden Paintworks Medium Plaster Trowel or Blue Blade Spatula
- Low Nap Roller
- Masking Tape
- Painting Knives/Small Spatula

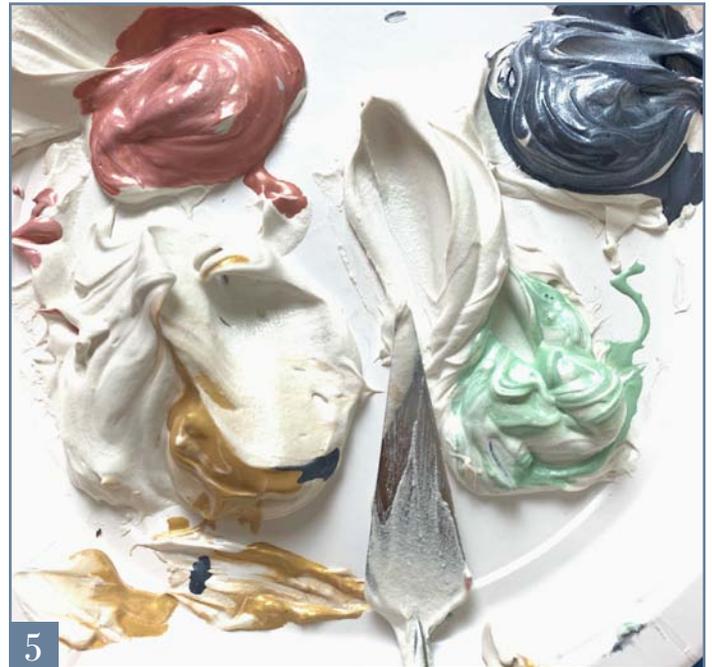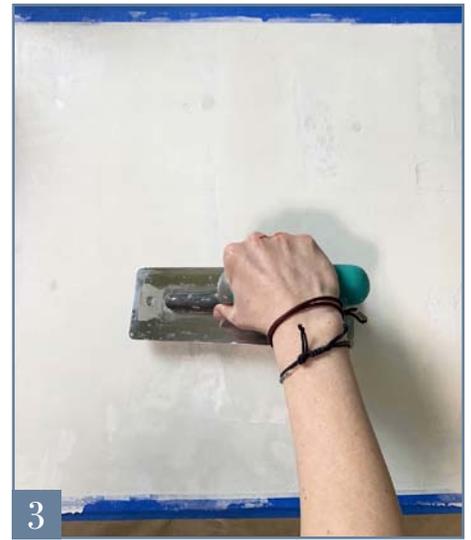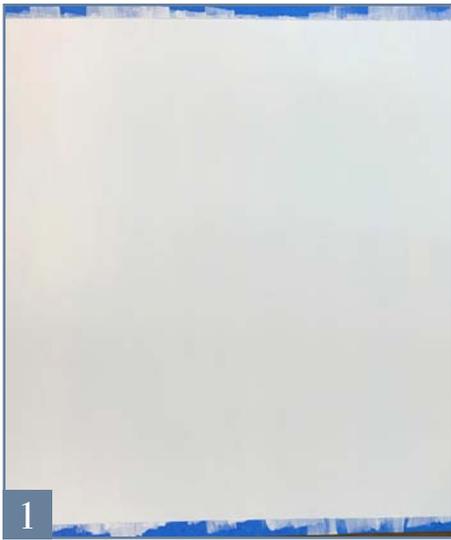

**HOW TO:**

- 1 | **PRIME** the surface with an appropriate, high-quality, water-based primer with the low nap roller and allow to fully dry (*Photo 1*). Using the medium plaster trowel, apply a thin layer of Soapstone and let dry (*Photo 2*).
- 2 | **APPLY** a thin layer of Metallic Texture Tint Base Pearl. Let dry (*Photos 3 and 4*).
- 3 | **MIX** (*Photo 5*):
  - 3a. One cup Metallic Texture Tint Base Pearl with (approx.) one teaspoon Pre-Mixed Metallic Paint Soft Gold.
  - 3b. One cup Metallic Texture Tint Base Pearl with (approx.) one teaspoon Pre-Mixed Metallic Paint Moody.
  - 3c. One cup Metallic Texture Tint Base Pearl with (approx.) one teaspoon Pre-Mixed Metallic Paint Future.
  - 3d. One cup Metallic Texture Tint Base Pearl with (approx.) one teaspoon Pre-Mixed Metallic Paint Splendor.

*continued on next page →*



**4 | APPLY** an even, thin layer of the 3a mixture from Step 3 on the whole surface area using the medium plaster trowel (*Photo 6*).

**5 | APPLY** the rest of the 3b, 3c, and 3d mixtures from Step 3 using a painting knife or small spatula, and gently drag the material in a vertical direction (*Photo 7*).

**6 | ADD** Metallic Texture Tint Base Pearl (approx. one teaspoon) on your medium plaster trowel or on the blue blade spatula (*Photo 8*). Start blending the colors by pressing slightly until you reach the desired design (*Photo 9*).

*Tip: Try to move the trowel/spatula vertically so you get a strié effect.*

